



INFINITO

Davide Groppi / 2016

A spatial concept, it is continuous light.

An ultra-thin strip of special stainless steel just 18 mm wide “cuts” the space to produce indirect light. Infinito can be adapted to various situations, stretched from wall to wall or ceiling to floor.

It comes in strips up to 36 metres in length (standard versions at 6 / 12 / 18 metres in length).

Infinito breaks down the luminaire, turning it into something else, leaving only a trace, a line and then not even that, just light.

This project pays homage to the art of Lucio Fontana and his spatial concepts.

The graphic force of this system is surprising.

It can be integrated into space, but at the same time it becomes part of that space. Infinito: essence and absence.

Luminaire designed also to be powered by ENDLESS system.

Archiproducts Design Award 2017

People's Choice AZ Award 2017

È un concetto spaziale, è luce continua.

Un nastro sottilissimo, in un particolare acciaio inossidabile e di soli 18 millimetri di larghezza, taglia lo spazio e produce luce indiretta.

È possibile adattare, tendere e orientare Infinito da parete a parete, da soffitto a pavimento, fino a 36 metri di lunghezza (lampada standard 6 / 12 / 18 metri).

Infinito smaterializza l'oggetto lampada, trasformandolo in qualcos'altro, lasciandone solo una traccia, una riga e poi nemmeno più quella, solo la luce.

È un omaggio all'arte di Lucio Fontana e ai suoi concetti spaziali.

La forza grafica di questo sistema è sorprendente, per la sua capacità di essere integrato e nello stesso tempo presente nello spazio.


Infinito, essenza e assenza.

Apparecchio illuminante alimentabile anche con il sistema ENDLESS.


Archiproducts Design Award 2017

People's Choice AZ Award 2017

How to order - INFINITO 6

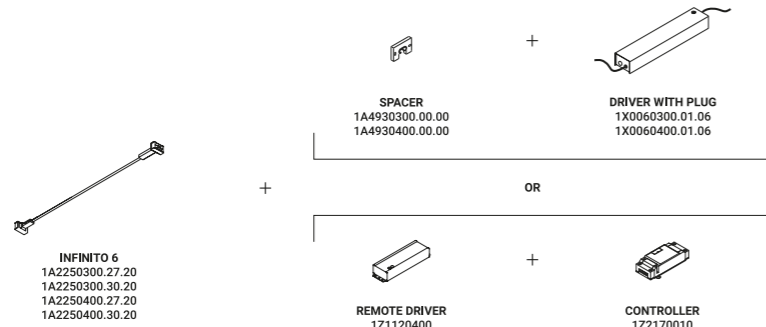

How to order - INFINITO 12

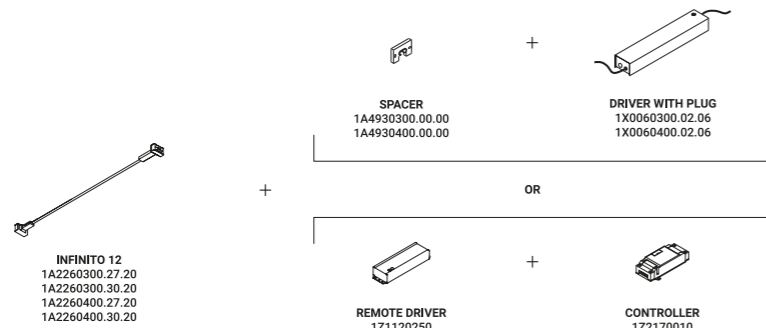

How to order - INFINITO 18



Wall-Systems / Indirect / Indoor

Material Metal
Finish .03 Matt White .04 Matt Black

Note Special stainless steel tape (18 mm) stretched from wall to wall. Available in 6 / 12 / 18 m with a single power unit and uniform lighting. Available in Tunable White (TW – 5 / 10 m) version. LED strip that can be divided every 96,6 mm. INFINITO 6 and INFINITO 12: possibility for the luminaires to be powered by ENDLESS system (Max 48V DC - Max 150W - Max 4A) and to be used, on the same circuit, with the ENDLESS models.

Speciale nastro (18 mm) in acciaio inox teso da parete a parete. Disponibile da 6 / 12 / 18 m con un'unica alimentazione e illuminamento uniforme. Disponibile in versione Tunable White (TW – 5 / 10 m). Strip LED sezionabile ogni 96,6 mm. INFINITO 6 e INFINITO 12: apparecchi illuminanti alimentabili anche con il sistema ENDLESS (Max 48V DC - Max 150W - Max 4A) ed utilizzabili, sullo stesso circuito, con i modelli ENDLESS.

INFINITO 6
57W - 1,48A
48V DC
2700K - 6576lm / 3000K - 6708lm
CRI >90
Driver not included
CE IP20 E

Matt White - 2700K	1A2250300.27.20
Matt White - 3000K	1A2250300.30.20
Matt Black - 2700K	1A2250400.27.20
Matt Black - 3000K	1A2250400.30.20


INFINITO 12
114W - 2,97A
48V DC
2700K - 13152lm / 3000K - 13416lm
CRI >90
Driver not included
CE IP20 E

Matt White - 2700K	1A2260300.27.20
Matt White - 3000K	1A2260300.30.20
Matt Black - 2700K	1A2260400.27.20
Matt Black - 3000K	1A2260400.30.20


INFINITO 18
171W
48V DC
2700K - 19728lm / 3000K - 20124lm
CRI >90
Driver not included
CE IP20

Matt White - 2700K	1A2270300.27.20
Matt White - 3000K	1A2270300.30.20
Matt Black - 2700K	1A2270400.27.20
Matt Black - 3000K	1A2270400.30.20


How to order -
INFINITO 5 TW

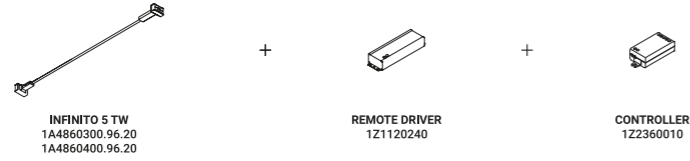

How to order -
INFINITO 10 TW

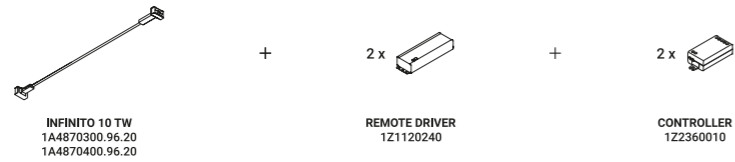


Note Tunable White describes the variable colour temperature controls from warm white to cool white light. *Tunable White è la regolazione variabile della temperatura di colore della luce dalla tonalità calda a quella fredda.*

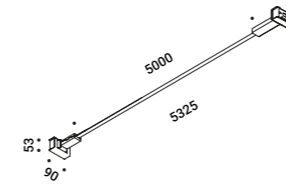

INFINITO 5 TW
Tunable White
96W
24V DC
2700K - 4690lm / 6500K - 5190lm
CRI >90
Driver not included
CE IP20

Matt White - 2700K / 6500K
Matt Black - 2700K / 6500K

1A4860300.96.20
1A4860400.96.20

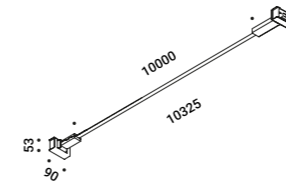


INFINITO 10 TW
Tunable White
192W
24V DC
2700K - 9380lm / 6500K - 10380lm
CRI >90
Driver not included
CE IP20

Matt White - 2700K / 6500K
Matt Black - 2700K / 6500K


1A4870300.96.20
1A4870400.96.20

Compulsory accessories / Accessori obbligatori


Drivers / Alimentatori

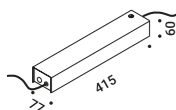


Driver with plug / Alimentatore con spina		Not included	
Matt White	Input 100-240V - 50/60Hz Output 48V - Max 80W - IP20 Dimmer on board	INFINITO 6	1X0060300.01.06
Matt Black	Input 100-240V - 50/60Hz Output 48V - Max 80W - IP20 Dimmer on board	INFINITO 6	1X0060400.01.06

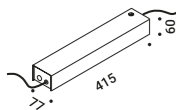


Driver with plug / Alimentatore con spina		Not included	
Matt White	Input 100-240V - 50/60Hz Output 48V - Max 150W - IP20 Dimmer on board	INFINITO 12	1X0060300.02.06
Matt Black	Input 100-240V - 50/60Hz Output 48V - Max 150W - IP20 Dimmer on board	INFINITO 12	1X0060400.02.06

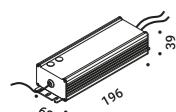


Driver / Alimentatore		Not included	
100-240V	48V/80W/IP67/1-10V	INFINITO 6	1Z1120400

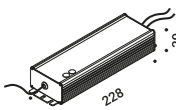

Driver / Alimentatore		Not included	
100-240V	48V/150W/IP67/1-10V	INFINITO 12	1Z1120250

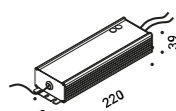


Driver / Alimentatore		Not included	
100-240V	48V/240W/IP67/1-10V	INFINITO 18	1Z1120390

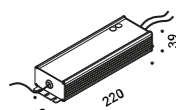


Driver / Alimentatore		Not included	
100-240V	24V/120W/IP67/1-10V	INFINITO 5 TW / INFINITO 10 TW	1Z1120240

Compulsory accessories / Accessori obbligatori



Controller		Not included	
DALI - PUSH - 0/1-10V - TRIAC - IP20		INFINITO 6 / INFINITO 12 / 1Z2170010	INFINITO 18




Controller Casambi - Tunable White		Not included	
		INFINITO 5 TW / INFINITO 10 TW	1Z2360010

Optional accessories / Accessori opzionali


Installation kits / Kit d'installazione




Spacer / Distanziale		Not included	
Matt White	For driver kit with plug	INFINITO 6 / INFINITO 12	1A4930300.00.00
Matt Black	For driver kit with plug	INFINITO 6 / INFINITO 12	1A4930400.00.00




Ceiling installation kit / Kit d'installazione da soffitto		Not included	
Matt White		1A0080300.00.00	
Matt Black		1A0080400.00.00	



Kit wall connection vertical sloped 45° / Kit attacco da parete per inclinazione verticale 45°		Not included	
Matt White		1A0120300.00.00	
Matt Black		1A0120400.00.00	




Kit wall connection sloped right 75° / Kit attacco da parete per inclinazione 75° destro		Not included	
Matt White		1A0340300.00.00	
Matt Black		1A0340400.00.00	




Kit wall connection sloped left 75° / Kit attacco da parete per inclinazione 75° sinistro		Not included	
Matt White		1A0350300.00.00	
Matt Black		1A0350400.00.00	



Swallows / Rondini		Not included	
Matt Black		1A0290400.00.00	

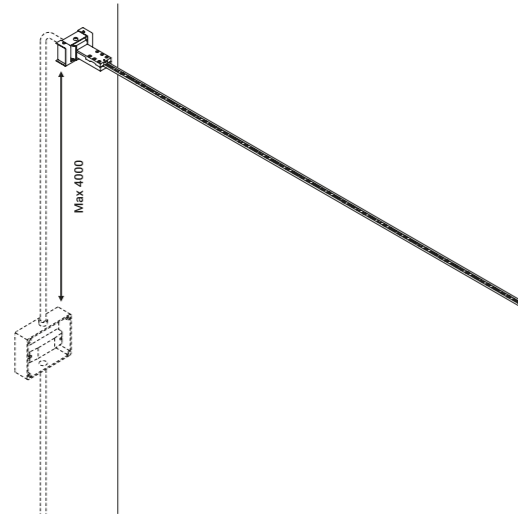


Example of installation with remote driver

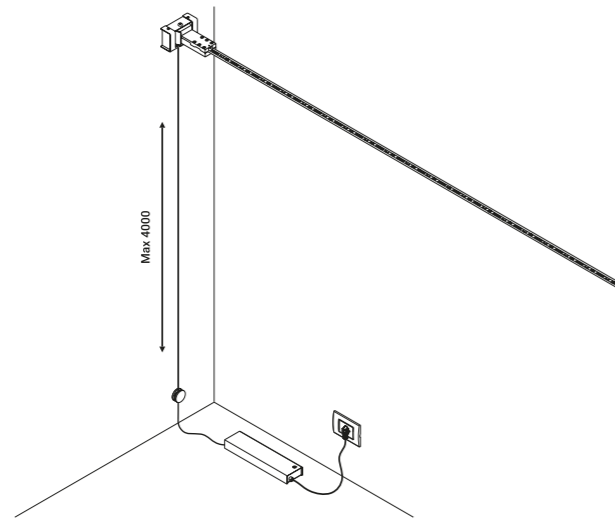


Example of installation with driver with plug




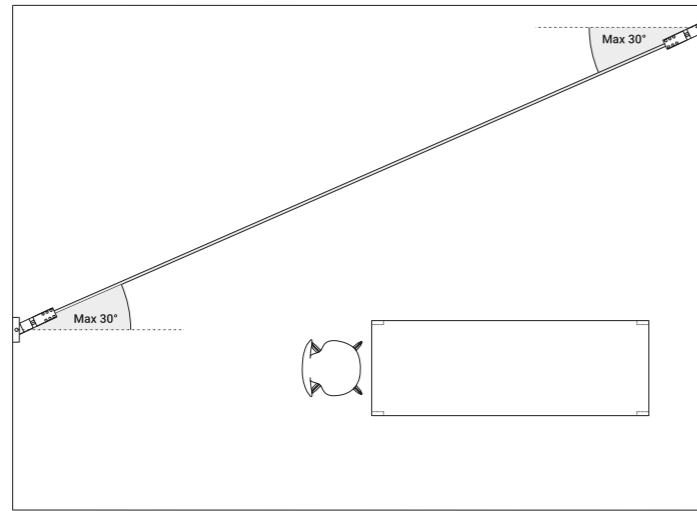


Example of installation with max rotation 30°

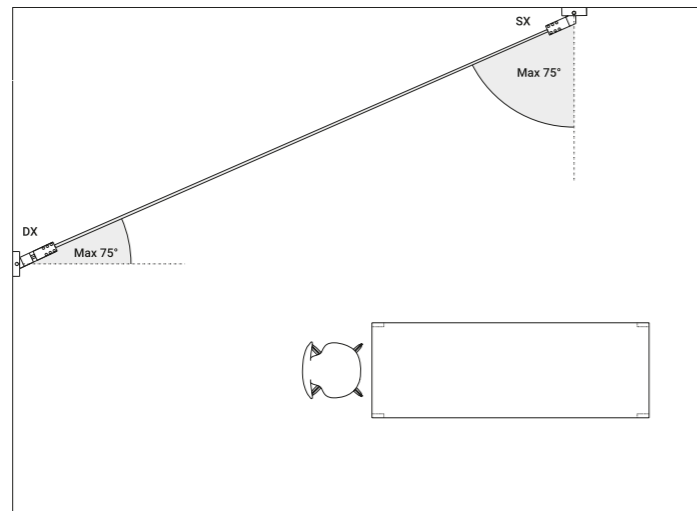

1A0340400.00.00 - 1A0350400.00.00 - Example of installation with kit wall connection sloped 75°

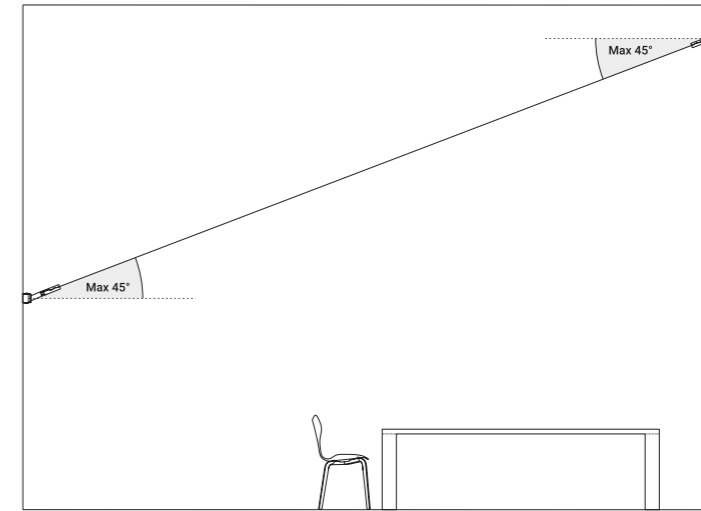

1A0120400.00.00 - Example of installation with kit wall connection vertical sloped 45°

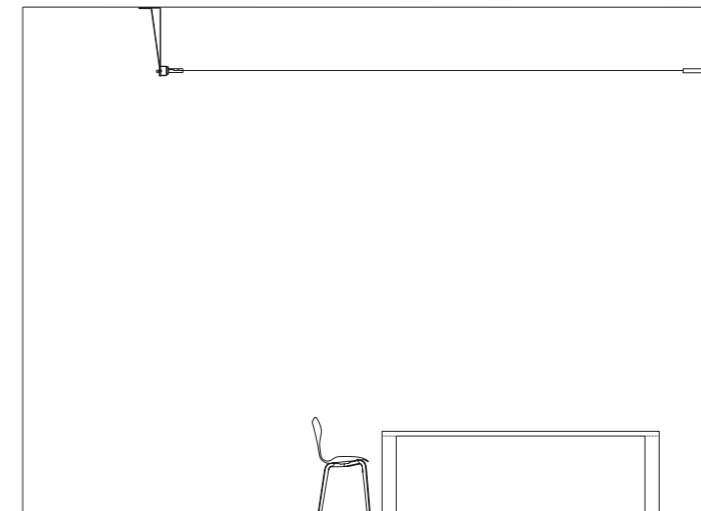

1A0080400.00.00 - Example of installation with ceiling installation kit