

PANZERI

Smoke

220-240V AC
L01543.050.0200

titanium/forest green diffuser




Data sheet

CODE	L01543.050.0200
SYSTEM POWER CONSUMPTION	max 116W
EFFICACY	11.47lm/W
LIGHT SOURCE	LED retrofit / halogen
LIGHT SOURCE KIT	* included
COMPATIBLE SOURCES	LED retrofit bulb 21W E27 2700K Ra80 2500lm (dimmable)* / max 116W E27
COLOUR TEMPERATURE	2700K Ra>80
LIGHT DISTRIBUTION	diffused
POWER SUPPLY	220-240V AC
FREQUENCY	50/60Hz
NOMINAL LUMINOUS FLUX	2500lm
LUMEN OUTPUT	1330lm
EFFICIENCY	53.2%
WEIGHT	7,02 Kg
PROTECTION DEGREE	IP20
PACKING DIMENSIONS	0,0 x 0,0 x 0,0 cm



Suspension lighting fixture for interiors, with direct and indirect light emission. Pickled sheet metal structure in titanium polyacrylic paint. Diffuser in hand-crafted blown glass with white or smoke-grey shaded effect. 2m (78,7") long steel suspension cable. 2m (78,7") long power cable in transparent PVC. Power canopy with galvanized sheet metal ceiling bracket and pickled sheet metal covering in titanium polyacrylic paint.

Technical drawing

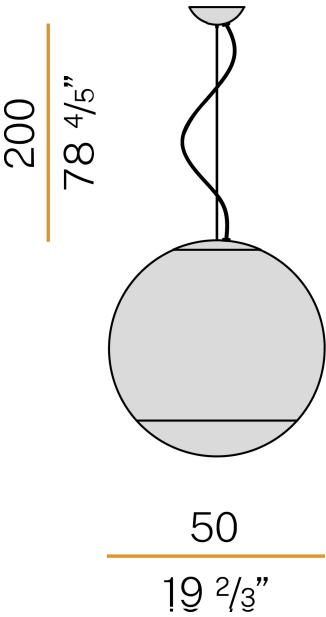

Polar diagram

