

# PANZERI

## Ombra

220-240V AC dimmable (DALI/Push DIM)

L16019.115.0502

matte brass




### Data sheet

CODE	L16019.115.0502
SYSTEM POWER CONSUMPTION	23W
EFFICACY	46.04lm/W
LIGHT SOURCE	LED
COLOUR TEMPERATURE	2700K Ra>90
POWER SUPPLY	220-240V AC
FREQUENCY	50/60Hz
ELECTRICAL CONFIGURATION	dimmable (DALI/Push DIM)
DRIVER	integrated included
NOMINAL LUMINOUS FLUX	2896lm
LUMEN OUTPUT	1059lm
EFFICIENCY	36.6%
WEIGHT	1.71 Kg
PROTECTION DEGREE	IP20
COLOUR TOLLERANCES	SDCM <3
PACKING DIMENSIONS	24,0 x 127,0 x 11,0 cm



Suspension lighting fixture for interiors, with direct light emission.  
Extruded aluminium frame with polyacrylic paint finish in mat black or mat brass.  
White PVC-coated woven fabric shade.  
Polycarbonate inner diffuser screen.  
Steel suspension wire 3m (118.1") long with quick adjuster.  
3m (118.1") long, transparent PVC coaxial suspension and power cable.  
Feeding canopy with ceiling mounting bracket in pickled sheet metal and extruded aluminium housing with polyacrylic paint finish in mat black or mat brass.

### Technical drawing

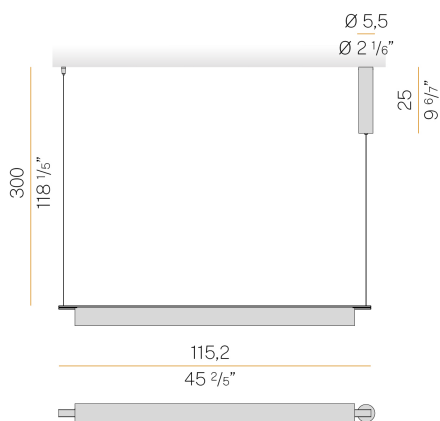

### Polar diagram