

FLOS

■ F1090031 Matte Black

Black Flag


Designed by Konstantin Grcic, 2023



75W - 2700K - CRI> 90

Wall-mounted lamp emitting direct and indirect light. Features an extendable aluminium arm that extends up to 3.5 metres from a vertical wall-mounted frame. Integrated touch-sensitive control panel on the arm enables on/off switching and independent dimming of upward and downward light. Can be wired to a light point or through an IEC plug.

Designed by Konstantin Grcic for Flos, Black Flag challenges the boundary between wall fixture and centrepiece, extending to project light into the heart of a room and folding back to a stark, sculptural presence when not in use. When closed, it recalls the flag that inspired its name; open, it becomes an illuminating focal point that commands attention yet remains humble in its purpose. Both functional and poetic, it has been designed to take up minimum space yet provide maximum illumination.

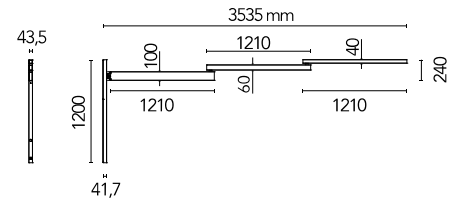

Are you a professional and your project needs consulting and support?

[BOOK AN APPOINTMENT](#)

Main specifications

EAN	8059607058138
Mounting	Wall
Environments	Indoor dry location
Light source type	LED
Light sources included	Yes
LED type	LED Module
Power (W)	75
System power (W)	75

Physical

Colour	Matte Black
Cord colour	Black
Canopy colour	Black
Canopy length/diameter (mm)	1200
Canopy width (mm)	43
Canopy height (mm)	43
Net weight (kg)	15.1
Package volume (m3)	0.08
IP internal	20

Download

[Mounting instructions](#) PDF


Photometric Files

[LDT / IES](#) ZIP


Technical Drawings

[2D](#) ZIP

[3D](#) ZIP

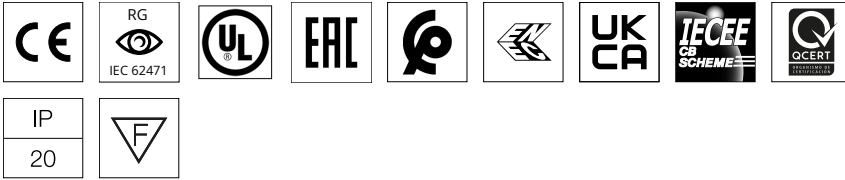

Schematic light drawing

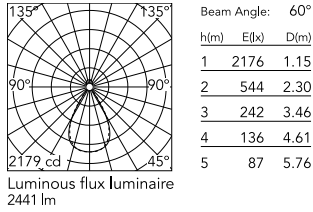


Photometric

Lighting type	Direct, Indirect
CCT (K)	2700
CRI>	90
Extreme cut off	No


Electrical

Insulation class	I
Frequency (Hz)	50/60
Main voltage (Vac)	220-240
Power supply	Integrated
Dimmable	Yes
Power supply type	Dimmable
Dimming interface	Dimmer Integrated

Ecodesign and Energy Labelling

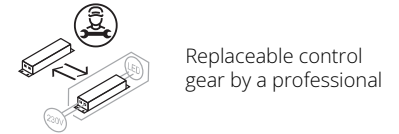

Spare Parts

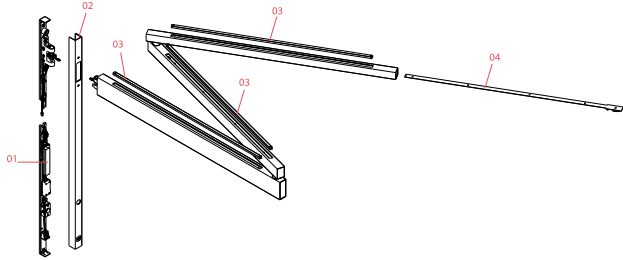

- | | | |
|-----|--|---------|
| 00. | Super magnet diam. 22 | RF37394 |
| 01. | Driver 96W 48V 220-240V | RF32405 |
| 02. | Black Flag Eu cover assembly | RF35308 |
| 03. | Black Flag up stripe assembly | RF35321 |
| 04. | Black Flag down 2700°K stripe assembly | RF35320 |



RF37394

Super magnet diam. 22



RF32405

Driver 96W 48V 220-240V



RF35308

Black Flag Eu cover assembly



RF35321

Black Flag up stripe assembly



RF35320

Black Flag down 2700°K stripe
assembly