

# FLOS

F1570009 White

## Clara

Designed by Piero Lissoni, 2015


57W - 3141lm - 2700K

ceiling/wall lighting fixture, providing diffused light. The front diffuser is made of high efficiency, injection moulded opal Polycarbonate. Ceiling/wall fitting is in injection moulded polycarbonate. Dimmable Led light source powered without the use of any power supply/transformer, but directly by the mains voltage (220-230 V AC). For decorative purposes an optional accessory made of PC and ABS+PC is made available in 4 different finishes: chrome, copper, black fumée and transparent.



Are you a professional and your project needs consulting and support?

[BOOK AN APPOINTMENT](#)

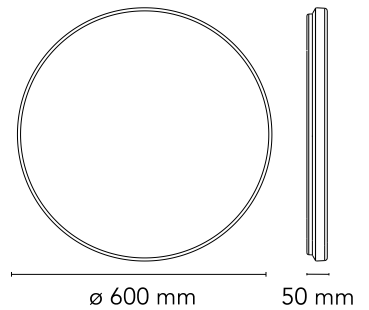

### Main specifications

EAN	8059607015322
Mounting	Ceiling and wall surface
Environments	Indoor dry location
Light Source Type	LED
LED type	LED Module
Power (W)	57
System flux (lm)	3141

### Physical

Colour	White
Length (mm)	600
Net weight (kg)	3
Package height (mm)	110
Package width (mm)	670
Package length (mm)	680
Package volume (m3)	0.05
IP internal	40

### Download


- [Mounting instructions](#) PDF
- [Compatible dimmers](#) PDF
- [Spare Parts](#) PDF

### Photometric Files


- [LDT / IES](#) LDT

### Technical Drawings

- [2D](#) ZIP
- [3D](#) ZIP



## Schematic light drawing

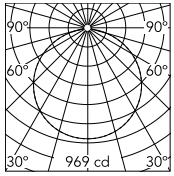

## Ecodesign and Energy Labelling

This product contains a light source of energy efficiency class F



Replaceable (LED only)  
light source by a  
professional

## Photometric

Light distribution	Roto symmetric
CCT (K)	2700
Extreme cut off	No

## Electrical

Insulation class	II
Frequency (Hz)	50/60
Main voltage (Vac)	220-240
LED voltage Vf (Vdc)	null
Power Supply	Integrated
Dimmable	Yes
Power Supply Type	Mains Cut Dimming
Dimming interface	Remote Dimmable (Dimmer Not Included)
Batteries inside	No

## Accessories & Power Supply



OPTIONAL

F1571000

Clara Frieze



OPTIONAL

F1571015

Clara Frieze



OPTIONAL

F1571030A

Clara Frieze




OPTIONAL

F1571057

Clara Frieze

## Spare Parts

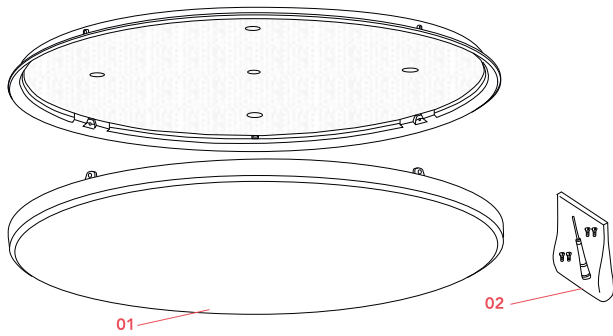

- |     |   |           |
|-----|---|-----------|
| 01. | Kit diffuser                              | RF1570200 |
| 02. | Kit of n.4 screws & hexagonal screwdriver | RF1570100 |

**DOWNLOAD**



RF1570200

Kit diffuser



RF1570100

Kit of n.4 screws & hexagonal  
screwdriver