

FLOS

F2500000 Chrome

Frisbi

Designed by Achille Castiglioni, 1978




Halogen - 105W

Suspension lamp providing direct, diffused and reflected light. Opaline polymethylmethacrylate (PMMA) injection-molded diffuser plate suspended by three fine steel cables. Polished, nickel-plated, and zapon-varnished stamped sheet metal reflector painted gloss-white inside. Black painted, injection-molded ABS ceiling fitting and rose.

Are you a professional and your project needs consulting and support?

[BOOK AN APPOINTMENT](#)

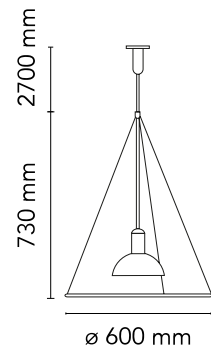

Main specifications

EAN	8059607016206
Mounting	Suspension
Environments	Indoor dry location
Light Source Type	Bulb
Lamp category	Halogen
Lamp holders	E27
Ilcos	HSGSR
Number of heads	1
Power (W)	105

Physical

Colour	Chrome
Length (mm)	600
Cord colour	Black
Cord length (mm)	2700
Canopy colour	Black
Canopy dimension (mm)	101
Canopy height (mm)	111
Net weight (kg)	2.65
Package height (mm)	170
Package width (mm)	655
Package length (mm)	655
Package volume (m3)	0.07
IP internal	20

Download

[Mounting instructions](#) PDF

[Spare Parts](#) PDF

Photometric Files

[LDT / IES](#) LDT


Technical Drawings

[2D](#) ZIP

[3D](#) ZIP



Schematic light drawing

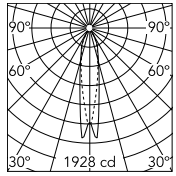

Beam Angle: 20°

h(m)	E(lx)	D(m)
1	1929	0.36
2	482	0.72
3	214	1.08
4	121	1.44
5	77	1.80

Luminous flux luminaire
858 lm


Photometric

Light distribution	Roto symmetric
Extreme cut off	No

Electrical

Insulation class	II
Frequency (Hz)	50/60
Main voltage (Vac)	220-250
LED voltage Vf (Vdc)	null
Dimmable	Yes
Dimming interface	Remote Dimmable (Dimmer Not Included)
Batteries inside	No

Bulbs

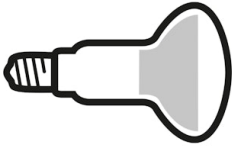


NOT INCLUDED

RF31458

LED Reflector Frosted Lamp E27

13W 2700K R80 Dimmable

Spare Parts

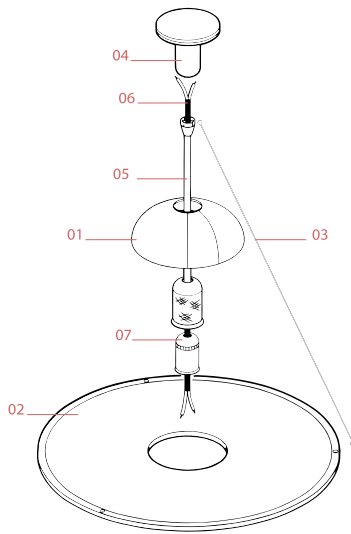

- | | | |
|-----|-----------------------------------|-----------|
| 01. | Reflector | RF00862 |
| 02. | Plexiglass diffuser | RF05806 |
| 03. | Frisbi steel wires (3 pieces) | RF06823 |
| 04. | Complete ceiling rose assembly | RF2500100 |
| 05. | Grid support with stem | RF01439 |
| 06. | 2x1 2.7 mt black electrical cable | RF29648 |
| 07. | New version lamp holder | RF2500200 |

DOWNLOAD



RF00862

Reflector



RF05806

Plexiglass diffuser



RF06823

Frisbi steel wires (3 pieces)



RF2500100

Complete ceiling rose assembly

 Thumbnail

RF29648

2x1 2.7 mt black electrical cable



RF01439

Grid support with stem

RF2500200

New version lamp holder