

# FLOS


FA1022290006 Grey

## Hyperion Mini NEW

Designed by FLOS Outdoor



LED source included. Completed with a reflective screen. Remote electrical power supply 24V dc to be ordered separately. Optional junction box to be ordered separately (3 module electrical box, model 503). Equipped with a 250 mm protruding section of neoprene cable and a kit with crimpable connectors and adhesive heat-shrinkable sleeves that guarantee the tightness of the connection. Dimmable.

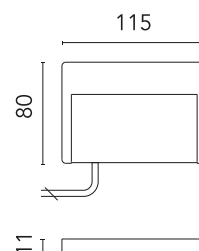

Are you a professional and your project needs consulting and support?

[BOOK AN APPOINTMENT](#)

### Main specifications

Mounting	Wall recessed, Wall
Environments	Outdoor wet location
LED type	Power LED
Number of heads	1
Power (W)	1.5
System power (W)	1.9
Source flux (lm)	156
System flux (lm)	64

### Physical

Colour	Grey
Orientation	Fixed
IP internal	65

### Download

Mounting instructions [↓ ZIP](#)


### Photometric Files

LDT / IES [↓ ZIP](#)

### Technical Drawings


2D [↓ ZIP](#)

3D [↓ ZIP](#)




### Ecodesign and Energy Labelling

This product contains a light source of energy efficiency class **G**



## Schematic light drawing

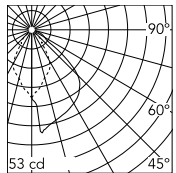

Beam Angle: 50°

h(m)	E(lx)	D(m)
1	52	1.19
2	13	2.38
3	6	3.57
4	3	4.75
5	2	5.94

Luminous flux luminaire  
64 lm

### Photometric

Lighting type	Direct
Light distribution	Asymmetric
CCT (K)	4000
CRI>	80

### Electrical

Insulation class	III
Main voltage (Vac)	24
Driver	Remote excluded
Dimmable	Yes
Dimming type	Non Dimmable, Dimmable 1-10V, Dimmable DALI 1
Emergency type	No

### Notes

Please check with your referent person in our Front Office if a code modification is needed to meet the required certification compliance

## Accessories & Power Supply



### OPTIONAL Power supply

RF25754

Power supply dual function Vout  
24Vdc: 8W/100÷240V Iout  
350ma: 6x1W/100÷240V IP20  
Class II selv.\_Non Dimmable



### OPTIONAL Power supply

RF25757

Power supply 24V 10W / 110-  
240V IP67 Class II selv.\_Non  
Dimmable



### OPTIONAL Power supply

RF25752

Power supply 24Vdc 20W / 220-  
240V IP67 Class II selv. Non  
Dimmable



### OPTIONAL Power supply

RF25747

Power supply 24V 10W /110-  
240V IP20 Class II selv. Non  
Dimmable



### OPTIONAL Power supply

RF25750

Power supply 24Vdc 17W / 110-  
240V (15W@110V) IP20 Class II  
selv. Dimmable Push-Dimm Or  
1.10V



### OPTIONAL Power supply

RF25748

Power supply dual function Vout  
24Vdc: 8W/100÷240V Iout  
350ma: 6x1W/100÷240V IP65  
Class II selv. Non Dimmable



### OPTIONAL Accessory

F990H010000

Recessed 3-module junction box  
(model 503)



### OPTIONAL Power supply

F990B21A000

Power supply 17W/110÷240V  
-24Vdc (15W@110V) IP67 Class  
II Selv. Dimmable Push-Dimm Or  
1.10V



OPTIONAL  
Power supply

F990B27A000

Power supply 24Vdc 70W / 220-  
240V IP67 Class I selv. Non  
Dimmable



OPTIONAL  
Power supply

F990B28A000

Power supply 24Vdc 50W / 220-  
240V IP67 Class I selv. Non  
Dimmable



OPTIONAL  
Power supply

F990B29A000

Power supply 24Vdc 100W /  
220-240V IP67 Class I selv.Non  
Dimmable