

FLOS

 F3299075 Orange

Lampadina

Designed by Achille Castiglioni, 1972



LED retrofit - 5W - 241lm - 2700K

Table lamp providing direct, diffused light. Anodized aluminum base serves to contain excess power cord. Bakelite lamp-holder, painted to match the switch in the orange and black colors. Clear globe lamp is partially sandblasted to diffuse the light.

Are you a professional and your project needs consulting and support?


[BOOK AN APPOINTMENT](#)

Main specifications

| | |
|-------------------|---------------------|
| EAN | 8059607033319 |
| Mounting | Table |
| Environments | Indoor dry location |
| Light Source Type | Bulb |
| Lamp category | LED retrofit |
| Lamp type | G125 |
| Lamp holders | E27 |
| Bulb finish | Semifrosted |
| Number of heads | 1 |
| Power (W) | 5 |
| System flux (lm) | 241 |

Physical

| | |
|---------------------|--------|
| Colour | Orange |
| Length (mm) | 125 |
| Cord colour | Black |
| Cord length (mm) | 2300 |
| Net weight (kg) | 0.35 |
| Package height (mm) | 250 |
| Package width (mm) | 140 |
| Package length (mm) | 145 |
| Package volume (m3) | 0.01 |
| IP internal | 20 |

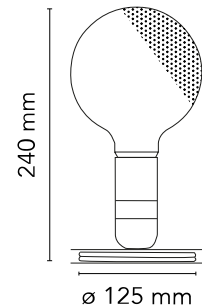

Download

Mounting instructions [↓ PDF](#)

Photometric Files

LDT / IES [↓ LDT](#)


Technical Drawings

2D [↓ ZIP](#)

3D [↓ ZIP](#)



Schematic light drawing

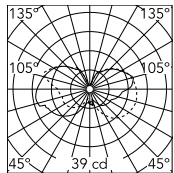

Luminous flux luminaire
241 lm

Photometric

| | |
|--------------------|------------|
| Light distribution | Asymmetric |
| CCT (K) | 2700 |
| Extreme cut off | No |

Electrical

| | |
|----------------------|----------------------------------|
| Insulation class | II |
| Frequency (Hz) | 50/60 |
| Main voltage (Vac) | 230 |
| LED voltage Vf (Vdc) | null |
| Dimmable | No |
| Dimming interface | Switch Integrated (Not Dimmable) |
| Plug type | Type C |
| Batteries inside | No |

Bulbs



INCLUDED

RF32797

LED Lamp 2W E27 230V 2700K

G125 Non Dimmable