

FLOS

■ F0001031 Matte Black


Skygarden 1

Designed by Marcel Wanders, Marcel Wanders studio, 2007



Halogen - 105W


Suspension luminaire providing diffused lighting. Hemispherical, mechanically-processed cast plaster diffuser, painted white inside. Outer finish: rust, glossy black, glossy white or matte gold. Plaster diffuser support in die-cast aluminum alloy, liquid-painted white. Molded upper bushing in die-cast, polished aluminum alloy, protected with transparent paint on the entire visible part. Upper cable gland and blocking ring nut in black injection-molded PC (polycarbonate). Shaped, galvanized adjustment screws. Transparent, injection-molded, upper and lower silicone shock absorbers. Lamp holder and fixing support in black injection-molded PPS (polyphenylene sulfide). Flashed and blown opal glass diffuser. Molded fixing ring nut in die-cast aluminum alloy with alodine plating. Skygarden 1 frieze in photo-etched and mechanically drawn AISI 304 steel. Molded and galvanized steel ceiling attachment Gray, injection-molded PA6 (Nylon) rose.

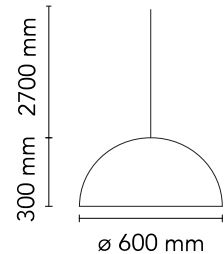

Are you a professional and your project needs consulting and support?

[BOOK AN APPOINTMENT](#)

Download

[Mounting instructions](#)  PDF

[Spare Parts](#)  PDF

Photometric Files

[LDT / IES](#)  LDT

Technical Drawings

[2D](#)  ZIP

[3D](#)  ZIP

[Bim](#)  ZIP

Main specifications


EAN	8059607012765
Mounting	Suspension
Environments	Indoor dry location
Light Source Type	Bulb
Lamp category	Halogen
Lamp holders	E27
Iicos	HSGS
Number of heads	1
Power (W)	105

Physical

Colour	Matte Black
Length (mm)	600
Cord colour	Clear
Cord length (mm)	2700
Canopy colour	Matte Black
Canopy dimension (mm)	146
Canopy height (mm)	36
Net weight (kg)	13
Package height (mm)	435
Package width (mm)	730
Package length (mm)	730
Package volume (m3)	0.23
IP internal	20



Schematic light drawing

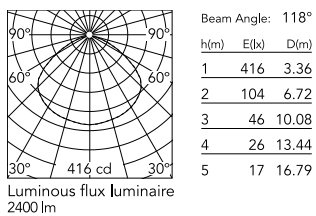

Photometric

Light distribution	Symmetric
Extreme cut off	No

Electrical

Insulation class	I
Frequency (Hz)	50/60
Main voltage (Vac)	220-250
LED voltage Vf (Vdc)	null
Dimmable	Yes
Dimming interface	Remote Dimmable (Dimmer Not Included)
Batteries inside	No

Bulbs




NOT INCLUDED

RF29388

LED T46 Lamp E27 20W 2700K

Dimmable

Spare Parts

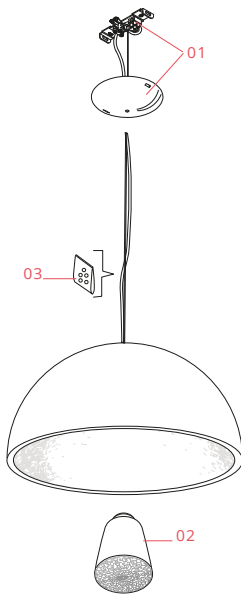

- | | | |
|-----|----------------------------------|-----------|
| 01. | Opal black ceiling rose assembly | RF6410431 |
| 02. | Skygarden 1 glass diffuser | RF6410100 |
| 03. | Kit of 5 or rings | RF05382 |

DOWNLOAD



RF6410431

Opal black ceiling rose assembly



RF6410100

Skygarden 1 glass diffuser



RF05382

Kit of 5 or rings